

USB Interface with Sentry Manager



The **USB Interface (USB1312)**, attached to a USB port on a PC running **Sentry Manager (V10)** required), is utilized for **Initialization** of and **Data Recovery** from a **Sentry**.