


Pry-Off Bottle Adapter Part Number PUA1510A

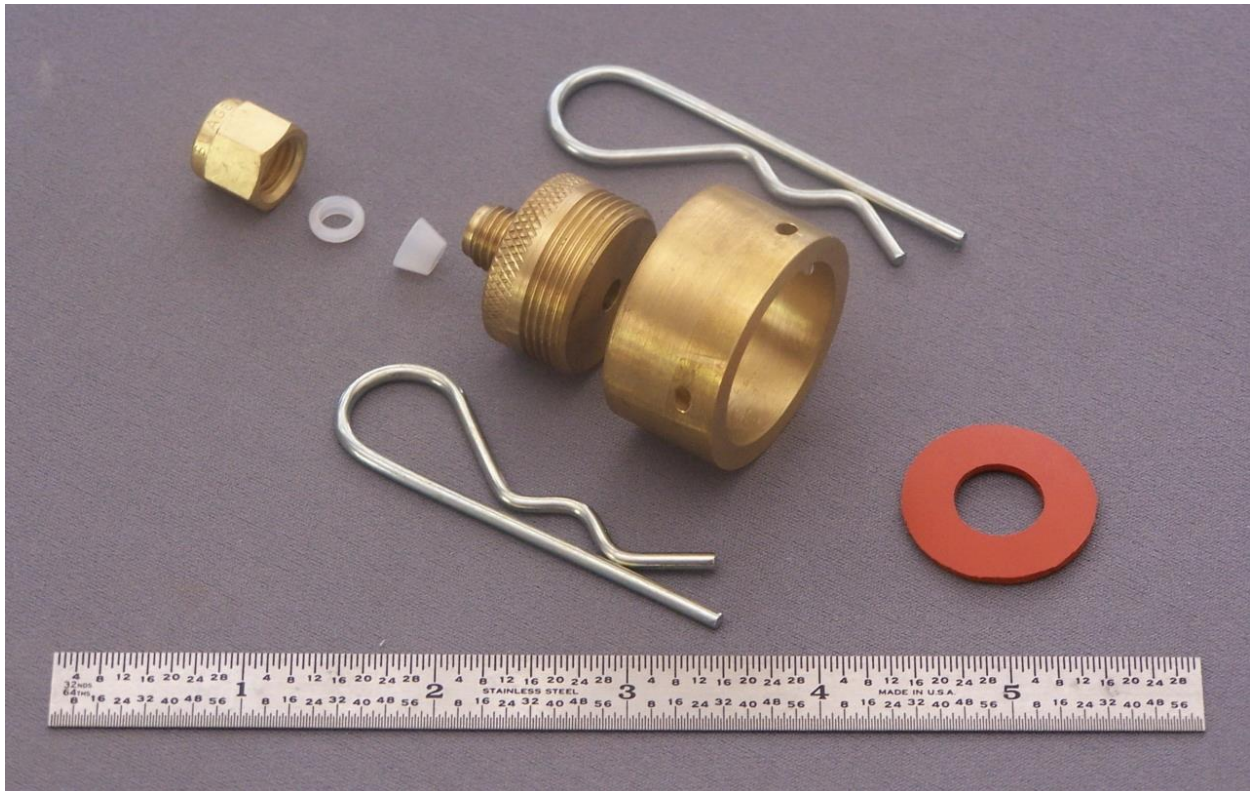

The **Pry-Off Bottle Adapter** provides the means to install a **Sentry** temperature probe into a bottle with a pry-off closure for a test.

To install the **Pry-Off Bottle Adapter** onto a bottle:

1. Loosely thread the bottom and top of the adapter together.
2. Install the Adapter Washer and place the adapter on the test bottle.
3. Adjust the adapter so that the holes for the Retainer Springs are below the lip of the bottle.
4. Insert a Retainer Spring into a set of holes on each side of the adapter.
5. Tighten (by hand only) the top part of the adapter until the adapter is secure on the bottle.

To install the probe in the **Pry-Off Bottle Adapter**:

1. Slide the Swagelok nut onto the **Sentry** probe.
2. Slide the flat nylon ferrule onto the probe with the small diameter towards the tip.
3. Slide the graduated nylon ferrule onto the probe with the small end towards the tip.
4. Insert the **Sentry** probe into the **Pry-Off Bottle Adapter** adjusting to the proper height.
5. Tighten the Swagelok nut sufficiently (by hand only) to hold the probe in place.