


Alcoa Bottle Adapter (25mm) Part Number PUA1507A

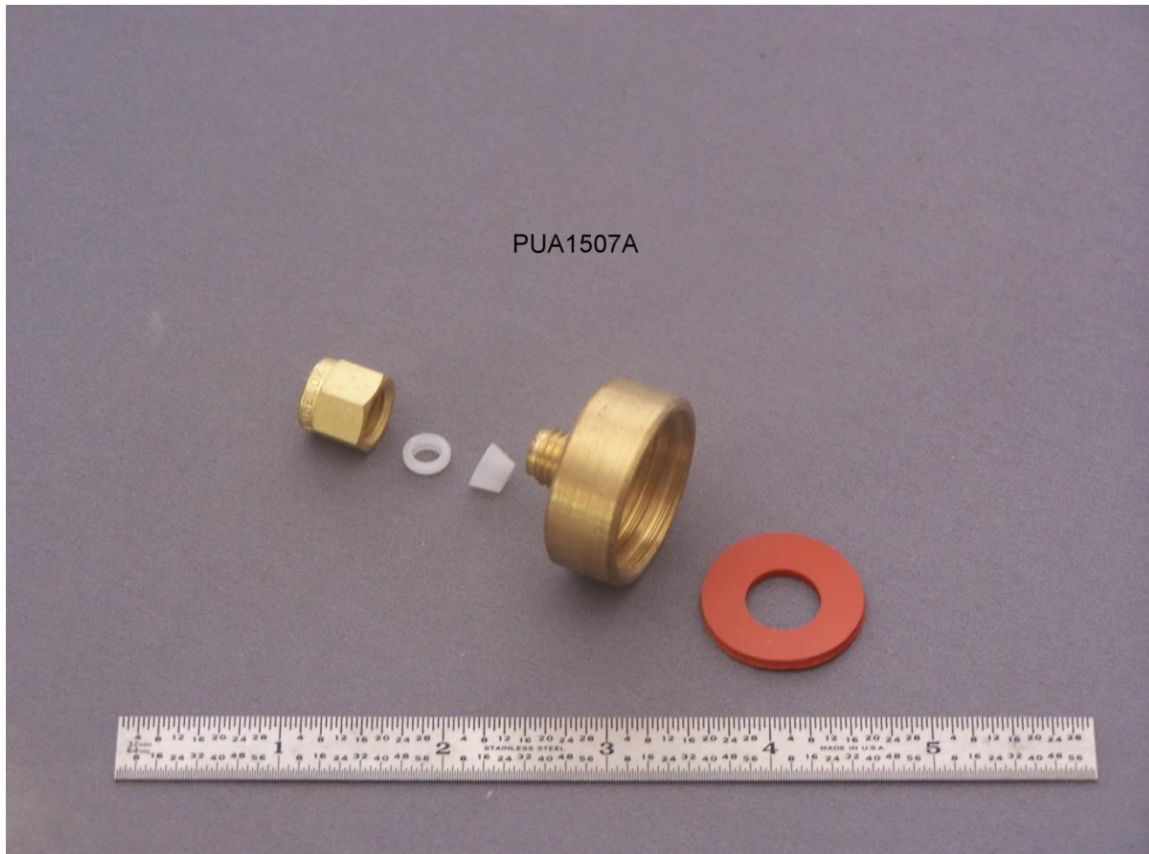

The **Alcoa Bottle Adapter (25mm)** provides the means to install a **Sentry** temperature probe into a bottle with a 25mm Alcoa closure for a test.

To install the probe in the **Alcoa Bottle Adapter**:

1. Slide the Swagelok nut onto the probe.
2. Slide the flat nylon ferrule onto the probe with the small diameter towards the tip.
3. Slide the graduated nylon ferrule onto the probe with the small end towards the tip.
4. Insert the **Sentry** probe into the **Alcoa Bottle Adapter** adjusting to the proper height.
5. Tighten the Swagelok nut sufficiently (by hand only) to hold the probe in place.